

Installation Guide

Wall Mount Side Glow

Applicable to Models: LW-EB-WM-SG


****Note:** To be installed by a certified electrician based on the codes of the region of installation. Fishtnk Inc. recommends two separate junction boxes for low voltage and high voltage wires. To comply with electrical code. A licensed electrician can install as appropriate

****Remarque:** À être installé par un électricien certifié, conformément aux codes régionaux d'installation électriques. Fishtnk recommande deux boîtes séparées pour les câbles à basse tension et à haute tension

Step-by-Step Instruction Guide

1

Wiring

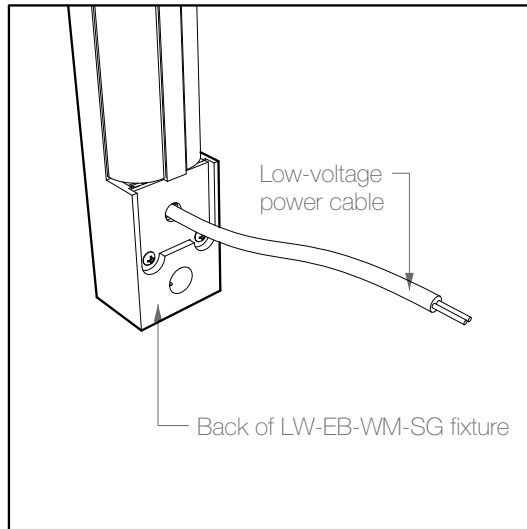

- Have a certified electrician wire low-voltage cables to their respective Wago connector in the Remote Driver Box

- Run the cable from the Remote Driver Box through a hole in the wall and connect to the Low-Voltage Cable coming out of the LW-EB-WM-SG fixture*

*Channel in back of fixture to allow tolerance for placing hole in the wall

Wire Chart / Tableau des Fils


White/Blanc	N
Black/Noir	L
Green/Vert	PG
Purple/Violet	Dim +
Pink/Rose	Dim -
(or Grey/Gris) 0-10V Dimming	

Low Voltage Cables

Red	+
Blue or Black	-

2

Mounting

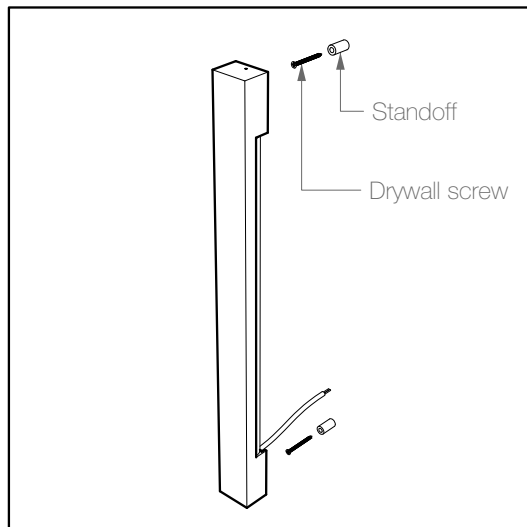


- Screw the supplied standoffs into the wall using the supplied drywall screws at the correct mounting points as dimensioned in the shop drawings

- Slide the fixture onto the mounted standoffs

3

Securing

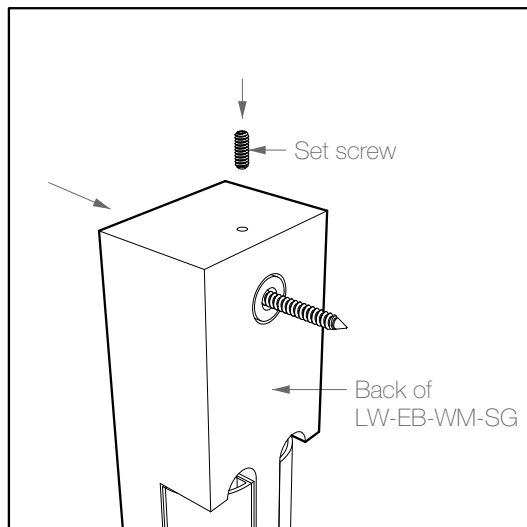

- Using an allen key, tighten the set screw to secure the LW-EB-WM-SG fixture to the standoffs on both ends

- Make sure the excess cable is fit into the hole in the wall/the channel in the back of the fixture before tightening