


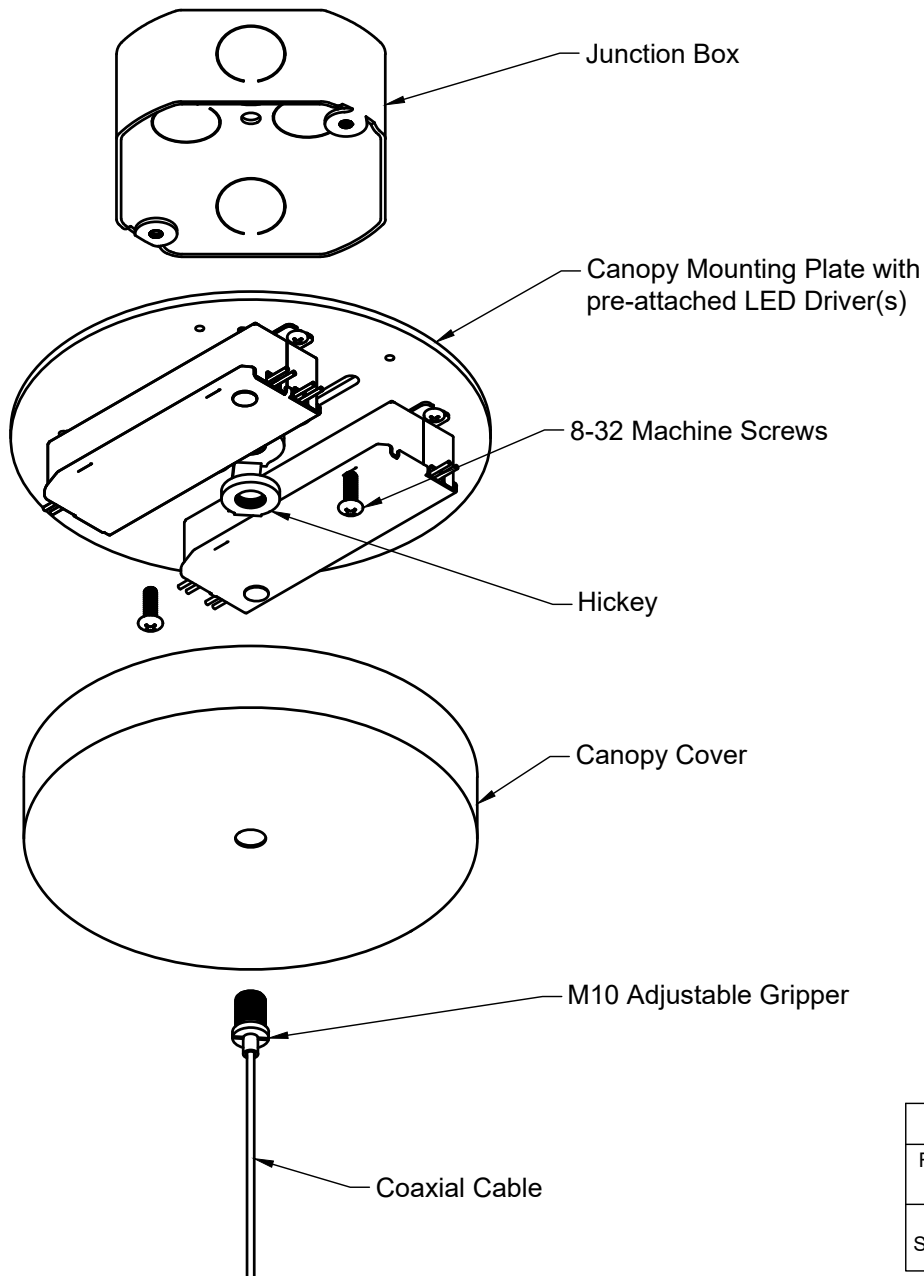

Wire Chart / Tableau des Fils	
White/Blanc	N
Black/Noir	L
Green/Vert	PG
0-10V Dimming	
Purple/Violet	Dim +
Pink/Rose or Grey/Gris	Dim -

Low Voltage Cables	
Red / White Inner Cable (Coaxial)	+
Blue / Aluminum Shielding (Coaxial)	-

NOTE: To be installed by a certified electrician based on the codes of the region of installation. To comply with electrical code. A licensed electrician can install as appropriate.

1. If applicable, secure the air craft cable on the other side of the fixture by securing the non-adjustable cable gripper into a structural member above and running the air craft cable from the ceiling gripper to the fixture gripper.
2. Wire the LED Driver(s) to the Junction Box following the High Voltage Wiring Chart above.
3. Mount the Canopy Mounting Plate to the Junction Box with the two 8-32 Machine Screws.
4. Run the Coaxial Cable through the M10 Adjustable Gripper, Canopy Cover, and the bottom hole of the Hickey attached to the Canopy Mounting Plate.
5. Wire the Coaxial Cable to the LED Driver(s) respective connectors following the Low Voltage Cables chart above.
6. Push up the Canopy Cover to align the hole with the Hickey and thread the M10 Adjustable Gripper to fasten. Adjust and level the fixture accordingly.